

## Safety Warnings and Operating Instructions

(please read all instructions carefully)

### Safety Warnings

- This appliance **MUST** only be used with LPG (Liquid Petroleum Gas).
- This appliance **MUST NOT** be used indoors or in any enclosed area - **OUTDOOR USE ONLY**.
- This appliance **MUST** only be used in a well ventilated area.
- This appliance **MUST** be placed on firm level ground.
- This appliance is compatible with an 8.5kg or a 13.5kg LPG cylinder only.
- The installation and storage of LPG cylinders **MUST** be in accordance with AS/NZS 1596.
- Minimum clearances **MUST** be maintained from combustible materials: 1200mm (top and sides) e.g. Overhead structures, walls, furniture, fixtures and plants (see 'Image 5')
- **DO NOT** place articles on or against this appliance (see 'Image 5')
- **DO NOT** transport or move this appliance while it is operating.
- **DO NOT** store chemicals or flammable materials in the vicinity of this appliance.
- **DO NOT** spray aerosols or flammable materials in the vicinity of this appliance while it is operating.
- **DO NOT** use other ignition methods to ignite this appliance e.g. Lighters or matches.
- This appliance is **NOT** intended to be installed on recreational vehicles and/or boats and is **NOT** suitable for a marine environment.
- Always ensure the gas cylinder valve has been closed firmly when the heater is not in use and before disconnecting the heater.
- **DO NOT** install in very windy locations.



## WARNING

If the appliance fails to operate correctly, remove it from service and contact Supagas - **DO NOT USE OR ATTEMPT TO REPAIR**.  
Improper installation, adjustment, or alteration can cause personal injury, property damage or even death.

### Operating Instructions

#### Before lighting the heater:

1. Ensure the heater is situated on firm level ground.
2. Lift the gas cylinder housing and rest on a bolt connecting the frame and pole.
3. Check the regulator fitting which screws into the gas cylinder - ensure the rubber seal is in position (end of regulator) and **NOT** cracked or damaged in any way.
- 3a. A Type 27 fitting does **NOT** require a rubber seal.
4. Connect the regulator to the gas cylinder and ensure the connection is tight. (Note: this is a lefthand thread - turn counterclockwise to tighten)
- 4a. A Type 27 fitting has a righthand thread - turn clockwise to tighten.
5. Turn the gas cylinder valve counterclockwise, two turns, to the **OPEN** position.
6. Check for gas leaks by applying soapy water (with spray bottle) to the cylinder valve and all gas connections. A leak is indicated when bubbles appear in the soapy water. **DO NOT** operate a heater if a leak is detected - review cylinder connection video. If leak is still present, contact Supagas.
7. Place the gas cylinder on the base of the heater - lower the gas cylinder housing.

### Turning the appliance on:

1. Press and turn the control knob to the **HI** position and while holding the control knob in, press the direct ignition button several times until the burner flame ignites. Hold the control knob in for a further 10-15 seconds after ignition, then release.
2. Turn control knob to the desired temperature level.
3. If the burner flame extinguishes accidentally turn the control knob to the **OFF** position, then repeat steps 1 and 2 to light again.

### Turning the appliance off:

1. Press and turn the control knob clockwise to the **OFF** position.
2. Turn the gas cylinder valve clockwise to the **CLOSE** position.

**Note: The definition of outdoors is an above ground open-air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.**

Please observe the following examples of adequately ventilated areas as defined in AS/NSZ 1596.

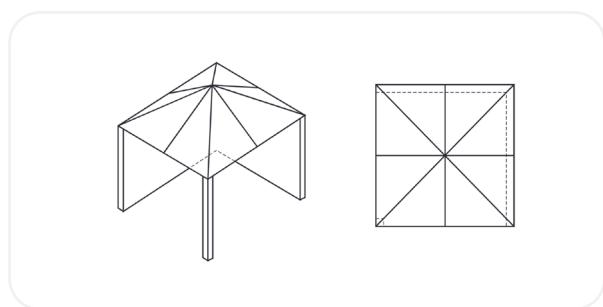


Image 1

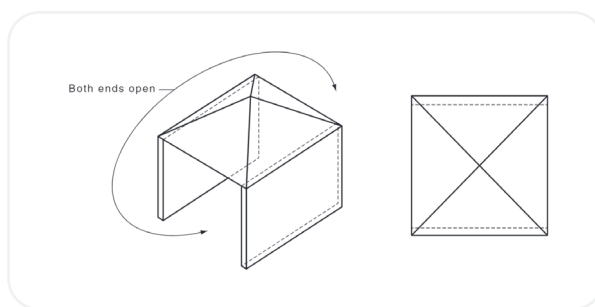


Image 2

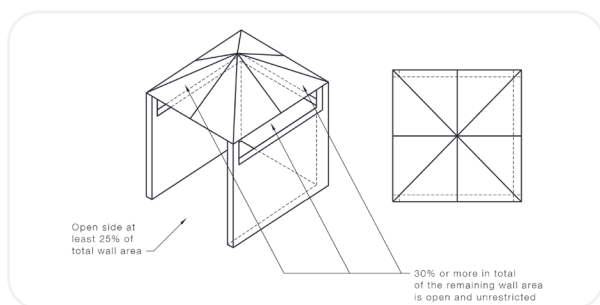


Image 3

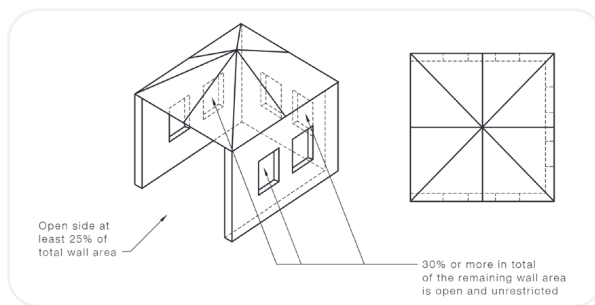


Image 4

Please observe the following minimum clearances required from combustible materials.

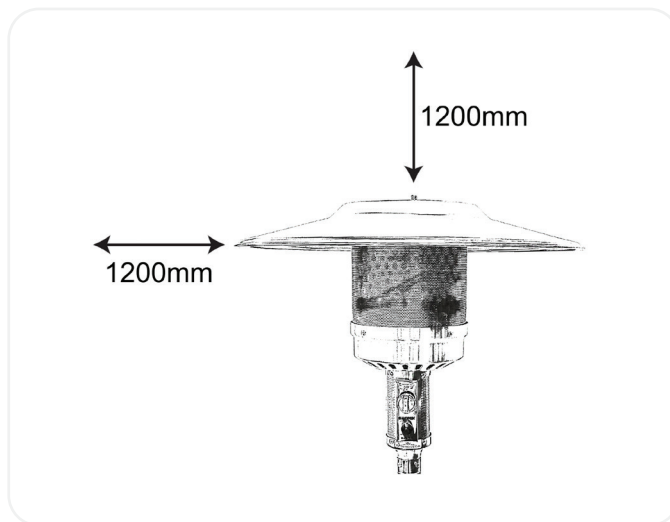


Image 5